

Wedgegard® Chain Coupling Manual Reset

Torque Table / ft-lbs



DATASHEET Version 4/2020

Model	S350		S500		S700		S950		S1000
WEDGEPIN	W37		W50		W50		W100		W100
Brass = B / STEEL = S	B	S	B	S	B	S	B	S	S
TORQUE CODES	* Wedgepins x 3		* Wedgepins x 3		* Wedgepins x 3		* Wedgepins x 3		* Wedgepins x 4
O	33	45	38	52	93	128	-	-	-
OW	46	63	53	73	141	202	-	-	-
GD	62	85	72	99	-	-	-	-	-
W	86	118	100	136	203	278	612	841	2559
WY	123	170	143	196	275	378	859	1180	3806
Y	163	224	189	260	359	520	1088	1497	5119
YB	216	297	251	344	525	722	1482	2036	6432
BN	223	-	260	-	-	-	-	-	-
B	254	349	295	405	722	991	1770	2434	7243
BG	297	407	344	472	901	1238	2102	2876	8563
G	366	503	425	583	1102	1512	2655	3614	10237
RG	443	609	514	706	1391	1910	3098	4204	-
R	498	685	578	794	1438	1975	3540	4868	11786
RK	-	-	-	-	-	-	-	-	-
K	-	-	-	-	1499	2058	4130	5642	12480

* Full complement or single pin can be used.

 
Torque figures are for single Wedgepin fitted – adjust torques by adding Wedgepins or fitting multiple codes.

Ordering new Wedgepins

Example: W37 - B - R

W37 Wedgepin size	B Material Brass	R Breaking Torque Code Letter
-----------------------------	----------------------------	---

Identification on existing Wedgepin



Tel: +44 (0)1453 750814
 Fax: +44 (0)1453 765320
www.howdon.co.uk
sales@howdon.co.uk

