

# Wedgegard® Chain Coupling Manual Reset

## Torque Table / in-lbs



DATASHEET Version 4/2020

Model	S350		S500		S700		S950		S1000
WEDGEPIN	W37		W50		W50		W100		W100
Brass = B / STEEL = S	B	S	B	S	B	S	B	S	S
TORQUE CODES	* Wedgepins x 3		* Wedgepins x 3		* Wedgepins x 3		* Wedgepins x 3		* Wedgepins x 4
O	395	545	460	628	1117	1531	-	-	-
OW	549	753	637	876	1691	2425	-	-	-
GD	740	1019	859	1186	-	-	-	-	-
W	1027	1410	1195	1637	2431	3337	7346	10090	30712
WY	1481	2034	1717	2354	3299	4530	10311	14161	45670
Y	1955	2683	2266	3115	4313	6240	13055	17967	61424
YB	2592	3561	3009	4133	6304	8658	17790	24428	77178
BN	2682	-	3115	-	-	-	-	-	-
B	3053	4193	3540	4859	8658	11893	21242	29207	86914
BG	3561	4888	4133	5664	10815	14854	25225	34518	102757
G	4397	6036	5098	7001	13220	18140	31863	43369	122848
RG	5316	7305	6169	8470	16691	22919	37173	50449	-
R	5982	8216	6939	9523	17259	23704	42484	58415	141435
RK	-	-	-	-	-	-	-	-	-
K	-	-	-	-	17987	24699	49565	67710	149755

\* Full complement or single pin can be used.

 
Torque figures are for single Wedgepin fitted – adjust torques by adding Wedgepins or fitting multiple codes.

Ordering new Wedgepins

Example: W37 - B - R

<b>W37</b> Wedgepin size	<b>B</b> Material Brass	<b>R</b> Breaking Torque Code Letter
-----------------------------	----------------------------	---

Identification on existing Wedgepin



Tel: +44 (0)1453 750814  
 Fax: +44 (0)1453 765320  
[www.howdon.co.uk](http://www.howdon.co.uk)  
[sales@howdon.co.uk](mailto:sales@howdon.co.uk)

